3 Commands

A command is a string of 8 bit ASCII characters consisting of a command ID followed by one or more parameters.

A command is terminated by a CR/LF (carriage return / line feed) sequence.

String length is max. 32 characters. Command ID and parameters are separated by spaces (0x20).

Commands are not case-sensitive (e.g. the commands "POWER ON", "Power On", "power on" will have the same effect).

For some commands short forms exist (e.g. "VOL" instead of "VOLUME")

All DAC 200 commands are described in detail in this chapter.

3.1 Command Overview

Command ID	ID (short form)	Parameter(s)	Example	Comment	RS 232 Version
POWER	PWR	[ON / OFF / ?]	POWER ON	Switches DAC 200 ON	1.0
INPUT	INP	[113 / ?]	INPUT 7	Selects Input no. 7 (AES/EBU)	1.0
VOLUME	VOL	{RAMP} [064 / ?]	VOL RAMP 50	Ramps VOLUME to 50	1.0
OVS		[16 / ?]	OVS 3	Selects Oversampling no. 3 (Bezier 1)	1.0
INV		[ON / OFF / ?]	INV ON	Turns INVERT function ON	1.0
WIDE		[ON / OFF / ?]	WIDE ?	Returns WIDE Status	1.0
MUTE		[ON / OFF / ?]	MUTE ON	Switches analogue outputs OFF	1.0
PRE		[ON / OFF / ?]		PRE-Amp output ON / OFF	1.0
РНО		[ON / OFF / ?]		Phones output ON /OFF	1.0
METER	MET	[04 / ?]		Select Meter Mode	1.0
ECHO		[ON / OFF / ?]	ECHO OFF	Turns RS232 ECHO OFF	1.0
NOTIFY	NTF	[0, 1, 2, / ?]	NTF 2	Selects "All Notifications ON" mode	1.0
SRV		[03, 04, 11, 12, 13, 14, 15, 101]		T+A Service Functions	1.0
BRIGHTNESS	BRT	Tbd.		Set LED brightness	1.0
VER		[?]	VER ?	Returns the current RS 232 Version	1.0
FW		[?]	FW ?	Returns the current DAC200 Firmware Version	1.0

Notes:

1.) Required parameters are enclosed in square brackets ([...]).

- 2.) Parameters in curly braces *{}* are optional.
- 3.) The column "ID (short form) contains alternative short commands (i.e. "*PWR ON" will have the same effect as "POWER ON"*).
- 4.) The column "RS232 Version" contains the **DAC 200** firmware version since the command is available.